

# VE XO X-POT TITAN 150 & 435 PSI OPERATION & MAINTENANCE INSTRUCTIONS



## WARNING!

DO NOT OPEN WHILST FLUID IS HOT AND/OR UNDER PRESSURE!

PLEASE USE SAFETY GOGGLES, GLOVES & AN N95 FACE MASK WHEN WORKING ON THIS VESSEL / MAGNETIC FIELD.



### VE XO X-POT TITAN 150 & 435 PSI ISOLATION

To isolate the unit, please follow the steps below:  
(**Note:** Part numbers are relevant to the image on the right side of this document.)

1) Close Entry/Supply Isolation Valve on the Inlet (7) and the Exit/Return Isolation Valve on the Outlet (9) - This will isolate the system.

### VE XO X-POT TITAN 150 & 435 PSI DOSING

To dose with the system with additives, please follow the steps below:  
(**Note:** You will need to isolate the system prior to these steps and the Part Numbers are relevant to the image on the right side of this document.)

1) Open the Drain IV connected to the Outlet (9), then open the manual vent (12). This will drain the vessel. If water continues to pour from the manual vent (12) the unit is not isolated from the system.

2) When the vessel is depressurized carefully loosen the 32 No. locking units on the top works flange lid in an opposite order, for example - loosen the nuts at the back of the X-POT against the wall, then the side nuts and then the front.

3) Swing the arms of the bolts down with the nuts attached to the side of the vessel.

4) Using a suitable spanner, screw the Lid Lifting Bolt (15) clockwise slowly. This will lift the Vessel Lid up and off of the flange of the Vessel Body (8). The Vessel Lid only needs to be raised sufficient to clear the gasket below it, approx. 5mm to 10mm.

5) Now using the lid handle, swing the lid clear of the Vessel Body (8) opening up the internals.

6) Remove (4 - x7 - Magnet Grates), (5 - x7 - Baffle Plates), (6 - x7 - Bag Filters), and (11 - x7 - Filter Baskets). If the filter is blocked or slow to drain, use a leverage tool (screwdriver etc.) to lever the side of the internals and dislodge the filter basket. We would recommend wiping the internal walls and base with a cloth.

7) Close the Drain IV connected to the Outlet (9) ready for pouring of additives.

8) Pour the additive/s into Vessel Body (8) (**Note:** Ensure this is done in accordance with manufacturer's instructions/advice)

9) After the additive/s have been added, the top flange lid can be re-assembled. (**Note:** Follow steps 1 to 6 in reverse to perform this.) (Ensure that components (4 - x7 - Magnet Grates), (5 - x7 - Baffle Plates), and (6 - x7 - Bag Filters), and (11 - x7 - Filter Baskets) are not re-assembled into the vessel)

10) Re-pressurise the X-POT by opening Entry/Supply IV on the Inlet (7) slightly and check for leaks. If OK, open Entry/Supply IV on the inlet (7) fully.


11) Open the X-POT fully to the system via opening the Exit/Return Isolation Valve on the Outlet (9), this will allow the flow through the unit and dose the system water.

12) After 2 minutes, the system would have dosed the additive/s through the system, follow steps 1 to 6 to isolate the system and remove the top flange lid to enable you to re-assemble the (4 - x7 - Magnet Grates), (5 - x7 - Baffle Plates), (6 - x7 - Bag Filters), and (11 - x7 - Filter Baskets) in the Vessel Body (8).

#### Operative Advice:

After dosing with additives, wash through the Funnel (1) with water.

### VE XO X-POT TITAN 150 & 435 PSI UNIT PARTS

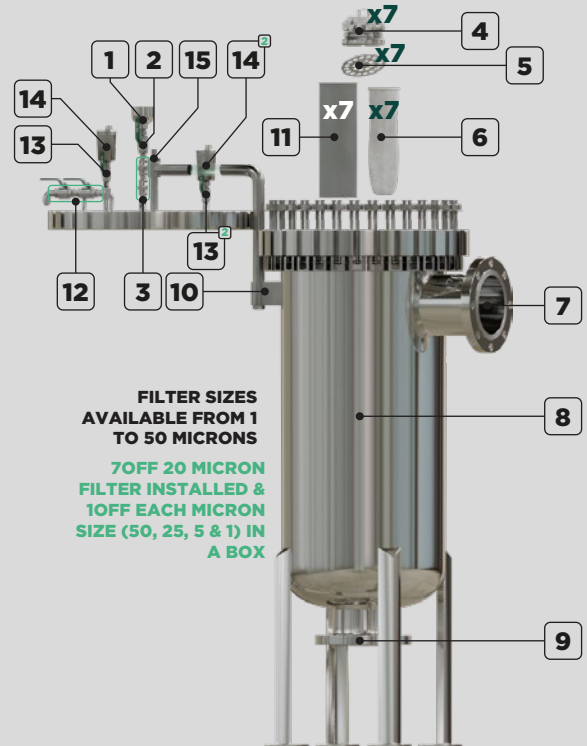

Part No.	Description	Part No.	Description
1	316 Stainless Steel Dosing Tundish	8	316 Stainless Steel Vessel Body
2	1" Isolation Valve (Dosing shut off)	9	6" Outlet (Exit/Return)
3	2x 316 Stainless Steel Non-Return Valves	10	Vessel Lid Swing Arm
4	x7 - 316 Stainless Steel Magnetic Grates	11	x7 - Strainer Baskets
5	x7 - 316 Stainless Steel Baffle Plates	12	x2 - 1/2" Isolation Valves (Manual Air Vent)
6	x7 - Polypropylene Spun Bonded Fibre Bag Filters	13	1/2" Isolation Valve (Automatic Air Vent Shut Off)
7	6" Inlet (Entry/Supply)	14	316 Stainless Steel Automatic Air Vent
		15	Lid Lifting Bolt

### VE XO X-POT TITAN 150 & 435 PSI FILTER CLEAN/CHANGE

1) Carry out the steps 1 to 6 as above.

2) Cleaning the x7 - Magnet Grates (4); unscrew the end caps of each of the sections on the Magnet Grate (4) and remove the magnets one by one using grips on the end of the magnet screws. Wash the Magnet Grates (4) under cold water tap or bucket of water and wipe down until all the magnetic debris has been washed off. (**Note:** Place each magnet min 6" apart to prevent attraction) Then insert the magnets back into the x7 - Magnet Grates (4) and ensure that the end caps are tightened sufficiently.

3) Replacing the x7 - Bag Filters (6), fix the filter around internal diameter of the x7 - Strainer Baskets (11) ensuring that the filter is fully expanded to the bottom to maximum surface area for debris collection.

4) Re-assemble the X-POT internal components (4 - Magnet Grates), (5 - Baffle Plate), (6 - Bag Filter), and (11 - Filter Basket) in the Vessel Body (8).

5) Re-pressurise the X-POT and open it fully to the system. (**Note:** Follow steps 11 and 12 above making sure to close the Manual Vent (12) and make sure that all air is vented through the Automatic Air Vent (13).)


# VE XO X-POT TITAN 150 & 435 PSI OPERATION & MAINTENANCE INSTRUCTIONS

## VE XO X-POT INSTALLATION

1) X-POT assembly as per the drawing/image (figure.1) on page 1 of this document whilst using a suitable jointing compound i.e., PTFE/Teflon tape on threads. Note: Parts 9 + 10 have interchangeable uses.

2) X-POT should be installed around a system pump or pump set to ensure that there is sufficient head pressure to overcome differential pressure caused by a blocked filter.

Examples below:

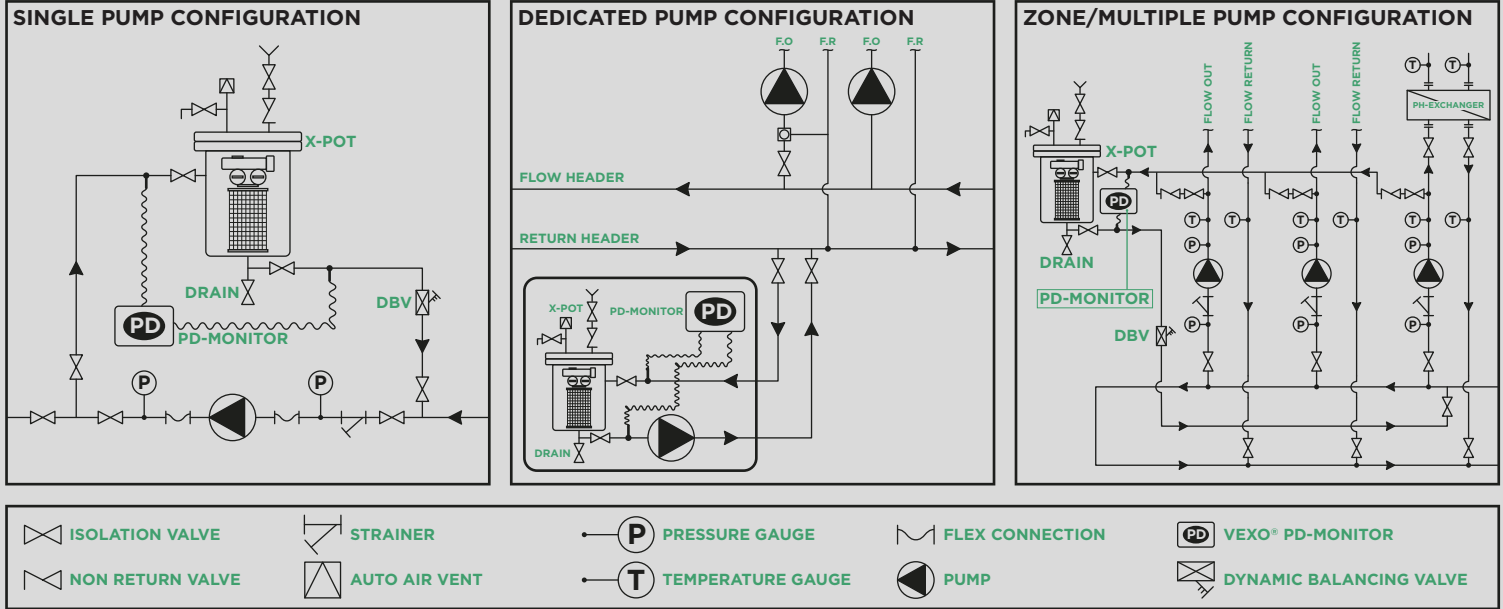

3) The X-POT inlet pipework must be piped from the system pump(s) discharge to X-POT, Entry/Supply Valve (7) and return to pump suction side or a common return line in the system. The maximum pipe run lengths from the system pipework to the X-POT is to be <10.5ft. In the event of multiple zone/pump configurations, a isolation valve and double check valve should be installed on each of the individual pipe runs from the circulating pumps.

### 4) Critical Installation Requirements:

- In a frost-free area (>41°F) and must also be protected from adverse environmental conditions.
- In a well-lit area to allow for safe changing of the filter media and chemical dosing.
- On a flat, vertical, level wall with good access to the X-POT itself.

5) X-POT requires a minimum clearance at the top of the unit of 20" for servicing and maintenance purposes.

6) X-POT is to be installed alongside a Dynamic Balancing Valve and Pressure Monitoring Device in compliance with BSRIA BG29/21 & BG50/2021 ensuring effective maintenance.

## VE XO X-POT COMMISSIONING

- Ensure that all components connected to the X-POT vessel have been leak tested prior to commissioning.
- Depending on the results of the system water quality tests, you may either commission the X-POT with either 1) Magnets Only or 2) Bag Filters/Baskets and Magnets.
- Ensure that all the top flange securing nuts and bolts are adequately fastened to ensure leak tightness.
- Ensure that the following isolation valves are fully closed at time of commissioning: Dosing Shut Off Valve (2), Manual Vent Valve (12), and Drain Valve (9).
- Ensure that you fill the pressure vessel with opening the entry/supply isolation valve (7).
- Ensure that the AAV is removing the remaining air held in the X-POT body.
- Ensure that the insulation jacket has been installed around the X-POT vessel body if applicable.
- Ensure that the direction of operation for the Dynamic Balancing Valve is in the correct direction with the flow.
- Ensure that the Dynamic Balancing Valve's flowrate has been correctly set for the system requirements. To calculate the flowrate required for the X-POT the following calculation will need to be completed:
  - Total System Volume / 86,400 seconds = GPM - This provides a litres per second flowrate for the Dynamic Balancing Valve.
  - If installed, ensure that the differential setpoint alarm has been set for the pressure monitoring device.

**PLEASE ENSURE THE REVERSE PAGE  
IS DISPLAYED ADJACENT TO THE  
X-POT FOR OPERATIVE USE**

